

Product name: Mid Century Modern Dining Chair Set of 4 Upholstered Side Chair

SKU: 295-4CHRMIDCNTRY

EMAIL: priority@zenvidahome.com

TEL: 855-349-4327 http://bit.ly/ZENVIDA

Don't Panic! We are here for you.

STOP

Call 855-349-4327 9AM-5PM EST M-F

email: priority@zenvidahome.com anytime for help with this product.

Need help?



Scan here!

Reaching out via product review, marketplace email, social media or leaving seller feedback may cause a delay in response. If you have questions about this product or need anything, please contact us. You are our priority!

WARNING

Power tools may strip bolts or screws. Hand tighten bolts to only about 75% tight. Do NOT completely tighten any bolt during assembly until all bolts are connected.

EMAIL: priority@zenvidahome.com WEB: http://bit.ly/ZENVIDA TEL: 855-349-4327

ASSEMBLY INSTRUCTIONS

IMPORTANT NOTE:

- PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.

HARDWARE LIST			PART LIST	
А	JCBC M6 X 25mm + S/W M6 + F/W M6 X 13mm	4PCS		RIGHT SIDE FRAME 1PC
			\Box 2	LEFT SIDE FRAME 1PC
В	JCBC M6 X 45mm + S/W M6 + F/W M6 X 13mm	4PCS	3	FRONT STRETCHER 1PC
			4	BACK STRETCHER 1PC
С	ALLEN KEY M4	1PC	5	TOP REST 1PC
D	L BRACKET	4PCS	6	CUSHION SEAT 1PC
E	PH SCREW M4 X 12mm <:ttt()	8PCS		
	I -			


CAUTIONS:

(1) DO NOT FULLY-TIGHTEN THE NUT OR **NUT BOLTS INITIALLY UNTIL ALL NUTS OR BOLT IS READY ASSEMBLED.**

(TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT <u>OVER-TIGHTEN</u> THE NUTS OR BOLTS.)

(2) KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.


STEP 1

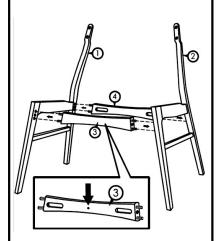


F WOOD DOWEL M8 x 25

Front Stretcher has a small hole for identification.


STEP 2

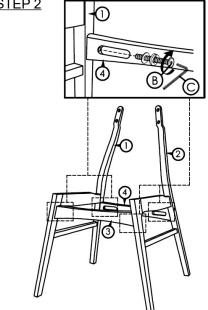




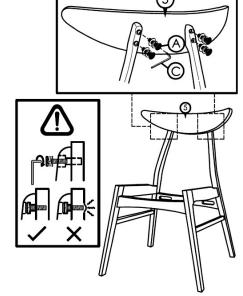



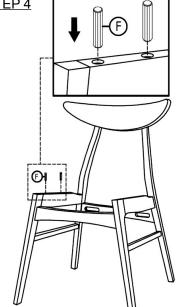

STEP 5

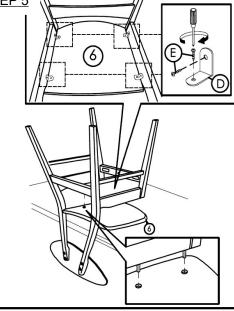

STEP 6

